



EG21 and EGS21 Series Electric Gage and Swichgage® Installation for Pressure, Temperature, Fuel Level, Voltmeter and Ammeter


Wire/Connector Assembly

NOTE: EG21 Series gage and EGS21 Series Swichgage movement and illumination require 12VDC to function. For 24 volt systems, voltage converters are built into the electrical wire/connector assembly and supplied with instrument.

Listed below are replacement part numbers for all wire/connector assemblies. Voltage converter included for 24 volt. Specify part number when ordering.

| | 12 VDC | 24 VDC |
|----------------|----------|----------|
| EG21P / T / F | 05004506 | 05006166 |
| EGS21P / T / F | 05004507 | 05006168 |
| EG21AM | 05004505 | 05006170 |
| EGS21AM | 05004504 | 05006172 |
| EG21VM | 05004508 | 05004508 |
| EGS21VM | 05004504 | 05004504 |

Gage Installation

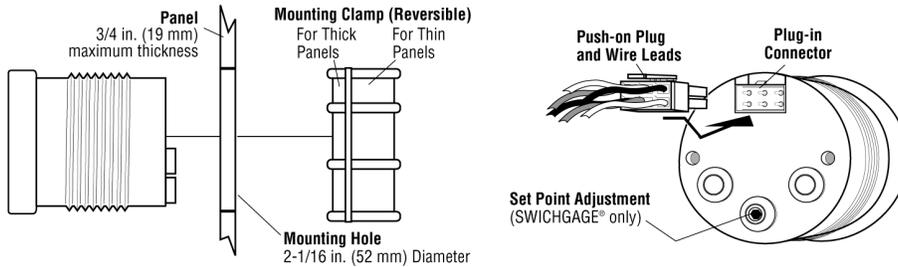

Sharper Accuracy. Higher Durability. Advanced Technology.

The EG21 Series Electric Gage and the EGS21 Series Swichgage instrument take the electric gage to new heights with proven state-of-the-art technology and reliability.




- EG Air Core movement design
- Technological improvements in lighting, accuracy in reading and wiring installation
- Assurance of highest reliability and service
- Environmentally sealed design
- Exceeds the rigid SAE J1810 standard
- Corrosion-resistant materials
- Desirable for marine and other environmentally sensitive applications
- Soft, non-glare dial and pointer illumination by "cold light" LED

Electric Swichgage instrument

The EGS21 Series Swichgage instrument has all of the features of the EG21 Series Gage plus an adjustable set point PowerHall® Effect switch output for operating alarms or equipment shutdown. The trip point is adjustable over 90% of the scale and has a set point indicator visible from the gage face. Now you can have both, the ease of electric gage installation and the reliable switching of Enovation Controls' famous Murphy Swichgage instrument.

Dimensions

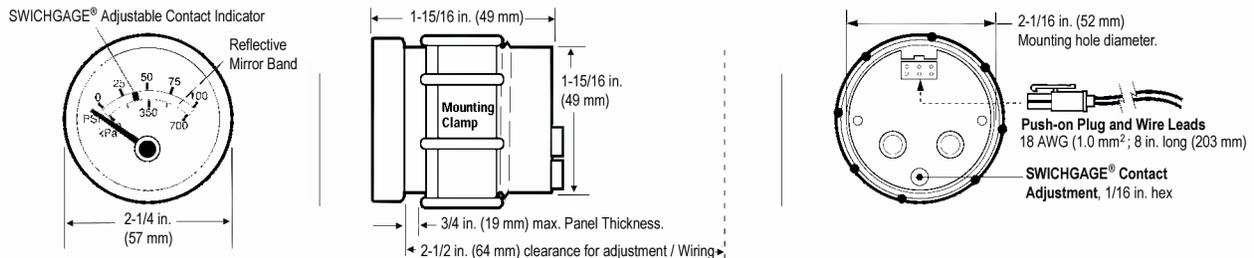

In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time. MURPHY, the Murphy logo, and Swichgage® are registered and/or common law trademarks of Enovation Controls, LLC. This document, including textual matter and illustrations, is copyright protected by Enovation Controls, LLC., with all rights reserved. (c) 2016 Enovation Controls, LLC.

Specifications

Power input, all models and sender: **12 VDC or 24 VDC.**

Case: **Polyester (PBT), impact and weather resistant with screw-on mounting clamp.**

Bezel: **Polished 316 stainless steel standard; available in black, SAE style optional.**

Lens: **Clear Polycarbonate and UV stabilized.**

Air Core Movement: **Silicon dampened pointer.**

Dial: **Black with white markings; back-lite (marking becomes red when illuminated); dual scale with mirror band to reduce parallax reading errors.**

Swichgage Instrument Sensor: **PowerHall® Effect; outputs ground signal (sinking output) rated: 300 mA continuous (EGS21 models).**

Pressure, Fuel, Volts set on decreasing scale. Temperature and Amps set on increasing scale. Output saturation voltage (voltage drop across switch): 1.3-2.3 Volts @ 25°C (may require some conditioning to work with logic inputs).

Swichgage instrument Set Point Indicator: Visible on mirror band (scale); adjustable from the back of the unit (1/16 in. hex type wrench).

Wiring: **Plug connector with wire leads, 18 AWG (1.0 mm²), 8 in. (203 mm) long.**

Operating Temperature: **-40 to 185°F (-40 to +85°C).**

Storage Temperature: **-77 to 185° F (-60 to +85°C).**

Over voltage (Gage Movement): **Withstands 200% of nominal system voltage for 5 min. Meets SAE J1810.**


Reversed Polarity (Gage Movement): **Withstands reversed battery terminal polarity indefinitely within operating temperatures.**

Environment and Test: **Meets SAE J1810 standards**


Sender Installation

CAUTION: Do not use sender body to tighten. If sealant tape or pipe dope is used on the pressure sender, be sure that the tape or dope does not plug the sender's orifice.

Pressure Sender

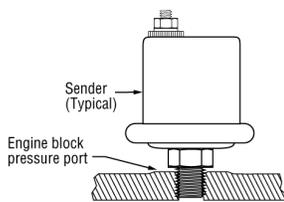


Temperature Sender

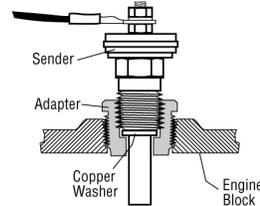


CAUTION: Extreme caution must be used in handling or working on or around the fuel tank. It must be worked on only in a WELL VENTILATED area. Keep all flame and hot materials away from it. Do not smoke while working on or around the tank. Avoid sliding or dragging the tank, or other actions which may cause a spark.

Fuel Level Sender

Mounting Hole Dimensions

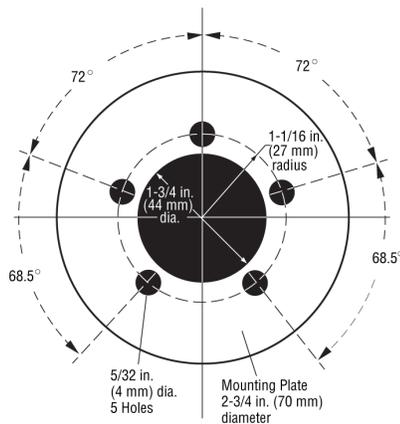

Tank Installation

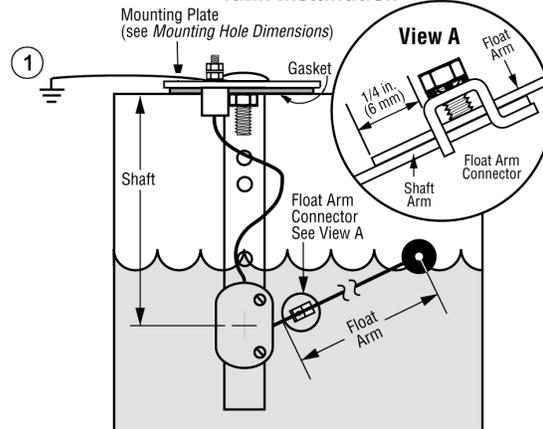


NOTE: When installing the fuel sender in a non-metallic tank using a single wire sender, another wire must be added from one of the sender mounting bolts to the battery ground (negative post). See ① in the 'Tank Installation' illustration above.


Basic Wiring

WARNING: Disconnect battery negative cable before wiring or service.

Pressure, Temperature, Fuel Level and Voltmeter Gage

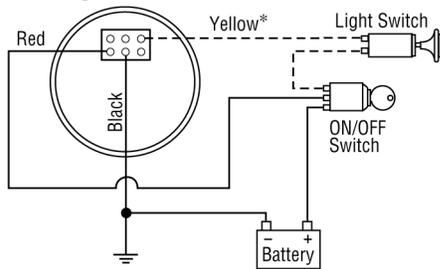


Ammeter Gage

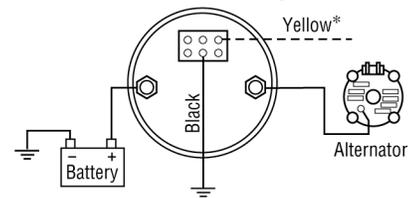


*Yellow wire is optional for gage illumination and does not need to be connected for gage to operate.

Sender Wiring


Grounded Sender

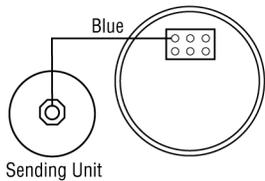

Ungrounded Sender

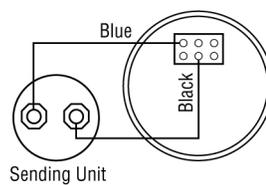



Dual Gages with Dual Gage Sender

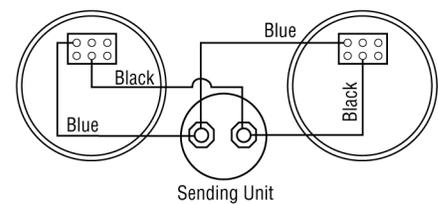

Swichgage Wiring

WARNING: DISCONNECT BATTERY NEGATIVE CABLE BEFORE WIRING OR SERVICE.

CAUTION: Connecting full Battery potential to the brown wire can damage the Swichgage. Shutdown circuit is rated for 300 mA continuous, 900 mA inrush. Circuit sinks to battery negative at set point.

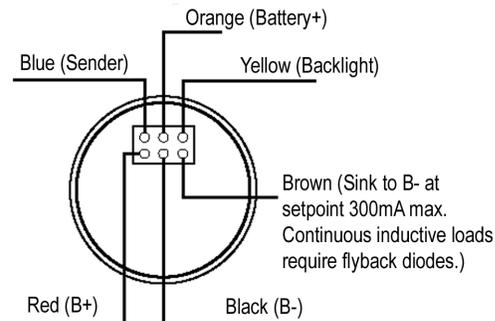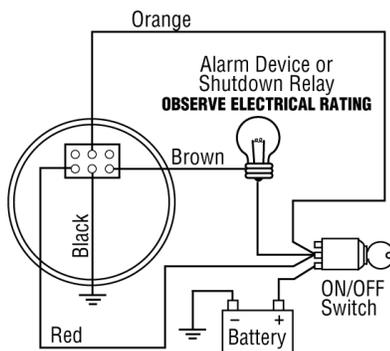


CAUTION: Devices containing solid state components can be damaged or caused to malfunction when used in systems which incorporate inductive loads (e.g., relays, solenoids, etc.) that can generate voltage spikes.

To reduce the potential for this type of damage, install a flyback or clamping diode across all inductive loads (see wiring diagram below).

Use Murphy diode package 65-00-0343 or equivalent. A typical diode is 1N4005 which is readily available from commercial sources. Failures of this type are not covered by our Limited Warranty.

Warranty - A limited warranty on materials and workmanship is given with this Murphy product. A copy of the warranty may be viewed or printed by going to www.fwmurphy.com

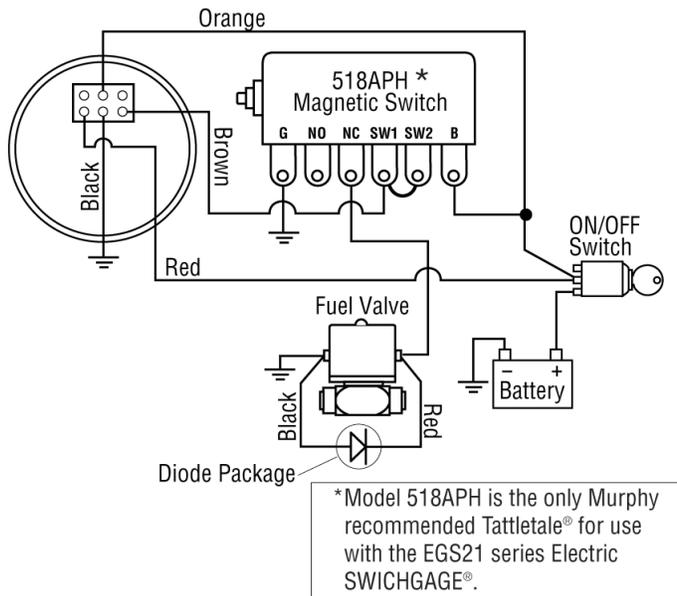

NOTE: Do not connect 117PH or power on TL7 to brown wire. Only use 518(A)PH or 760 Tattletale indicators. Pilot a relay with a flyback diode across the coil for loads pulling more current than rated.

WARNING!

Some applications have electrical transients that can damage the EGS21 gage and leave no apparent sign of failure. To prevent this failure mode from affecting the EGS and other systems, always install flyback diodes across all inductive loads.

NOTICE

The EG21 and EGS21 series Swichgag requires 12VDC to operate.

To support 24VDC systems, the harness is specifically designed to convert the supply voltage to 12VDC to operate the gage.

Refer to document (included) 00-02-0251 EG21 & EGS21 Series Electric Gage and Swichgag Installation. The latest version can be found at www.fwmurphy.com

00-02-0648
2013-11-20

ENOVATION CONTROLS CORPORATE HEADQUARTERS
5311 S 122ND EAST AVENUE
TULSA, OK 74146

ENOVATION CONTROLS – SAN ANTONIO OFFICE
5757 FARINON DRIVE
SAN ANTONIO, TX 78249

ENOVATION CONTROLS – HOUSTON OFFICE
105 RANDON DYER RD
ROSENBERG, TX 77471

ENOVATION CONTROLS LTD. – UNITED KINGDOM
CHURCH ROAD LAVERSTOCK
SALISBURY SP1 1QZ UK

MURPHY ECONTROL TECHNOLOGIES (HANGZHOU) CO, LTD.
77 23RD STREET
HANGZHOU ECONOMIC & TECHNOLOGICAL DEVELOPMENT AREA
HANGZHOU, ZHEJIANG 310018 CHINA

U.S. SALES & SUPPORT

ECONTROL PRODUCTS
PHONE: 210 495 9772
FAX: 210 495 9791
EMAIL: INFO@ENOVATIONCONTROLS.COM
WWW.ECONTROL.COM

MURPHY PRODUCTS
PHONE: 918 317 4100
FAX: 918 317 4266
EMAIL: SALES@ENOVATIONCONTROLS.COM
WWW.FWMURPHY.COM

MURPHY CONTROL SYSTEMS & SERVICES
PHONE: 281 633 4500
FAX: 281 633 4588
EMAIL: CSS-SOLUTIONS@ENOVATIONCONTROLS.COM

MURPHY INDUSTRIAL PANEL DIVISION
PHONE: 918 317 4100
FAX: 918 317 4124
EMAIL: IPDSALES@ENOVATIONCONTROLS.COM

INTERNATIONAL SALES & SUPPORT

UNITED KINGDOM
PHONE: +44 1722 410055
FAX: +44 1722 410098
EMAIL: SALES@ENOVATIONCONTROLS.COM
WWW.FWMURPHY.COM

CHINA
PHONE: +86 21 6237 5885
FAX: +86 21 6237 5887
EMAIL: APSALES@ENOVATIONCONTROLS.COM

LATIN AMERICA & CARIBBEAN
PHONE: 918 317 2500
EMAIL: LASALES@ENOVATIONCONTROLS.COM

SOUTH KOREA
PHONE: +82 70 7951 4100
EMAIL: SKOREASALES@ENOVATIONCONTROLS.COM

INDIA
PHONE: +91 91581 37633
EMAIL: INDIASALES@ENOVATIONCONTROLS.COM



FM 28221 (Tulsa, OK - USA)
FM 620667 (San Antonio, TX - USA)
FM 28221 (Rosenberg, TX - USA)
FM 29422 (UK)



FM 523851 (China) TS 589322 (China)