 


Oil Level Regulators for Lubricators

Model LR579 Regulates Lincoln Lubricators




Electrical Diagram




Switch Rating: 2A @ 20 V AC/DC, resistive

Models LR589 and LR589NC Regulates Lincoln Lubricators

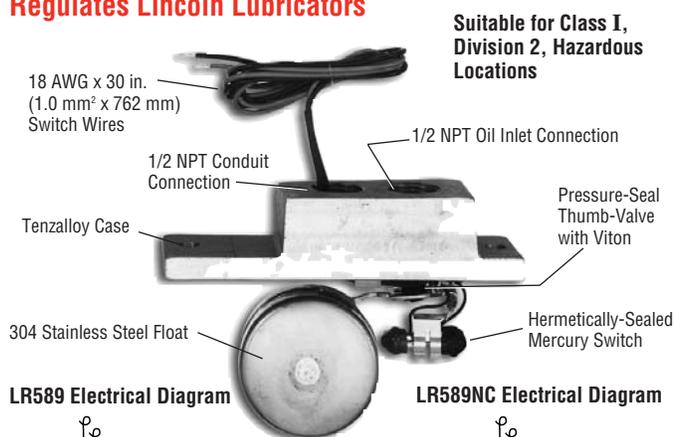


Suitable for Class I,
 Division 2, Hazardous
 Locations

 LR589 Electrical Diagram



Switch Rating: 1A @ 120 V

 LR589NC Electrical Diagram



Switch Rating: 1A @ 120 V

LR500 Series

- Unique Anti-Clog Thumb-Valve™
- Regulate Oil Flow From Reservoir to Keep Lubricator Full
- Eliminates Manual Oil Check and Refill Time
- Low-level Shutdown Switch
- Reduce Engine and Pump Repairs Caused By Low Lube Level

Description

The LR500 Series Level Regulators automatically add oil to a lubricator to maintain the factory recommended level. This function eliminates the work time necessary for manual checks and refills.

Each model has a low-level shutdown switch to protect equipment when oil supply is lost. If the lubricator oil level drops below the minimum operations level, the low-level switch will operate an alarm and/or shutdown the equipment.

Model **LR579** is for Lincoln lubricators. It features an adjustable low-level shutdown contact.

LR589 is for Lincoln lubricators, and the **LR589NC** is the normally closed wired version of the LR589.

How to Order

Specify model when ordering.

LR579


LR589

LR589NC


Warranty

A limited warranty on materials and workmanship is given with this FW Murphy product. A copy of the warranty may be viewed or printed by going to www.fwmurphy.com/support/warranty.htm

Dimensions

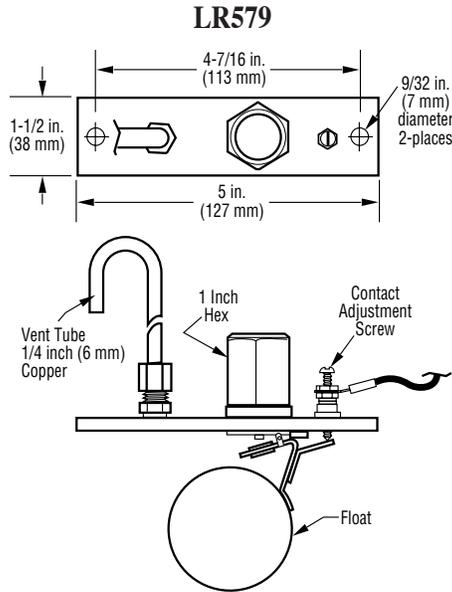

Shipping Weight: 13 oz. (368 g).
Shipping Dimensions: 4-3/4 x 4-3/4 x 3-1/4 in.
 (121 x 121 x 83 mm).

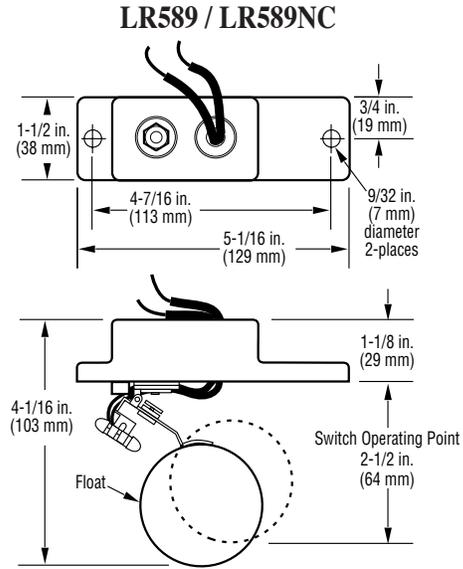

Shipping Weight: 12 oz. (340 g).
Shipping Dimensions: 4-3/4 x 4-3/4 x 2-3/4 in.
 (121 x 121 x 70 mm)

Installation


WARNING

Before beginning installation of this Murphy product:


- ✓ Disconnect ALL electrical power to the machine.
- ✓ Make sure the machine CANNOT operate during installation.
- ✓ Follow all safety warnings of the machine manufacturer.
- ✓ Read and follow all installation instructions.

1. Remove the cover on a vacant cell of the lubricator (DO NOT install in bays next to crank arm).
2. Bolt the level regulator in place, using the bolts that held the cover.
3. Connect the flex hose from the oil reservoir to the oil inlet at the level regulator. Oil reservoir must be at least two feet (0.61 meters) above the level regulator.
4. Wire switch for alarm and/or shutdown. One switch can be used to shut-down all equipment supplied by a common oil reservoir.

Typical Wiring for LR579

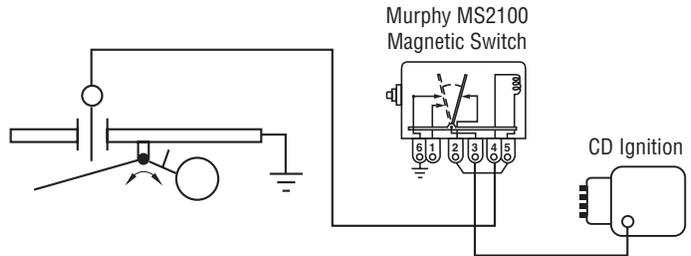

Typical Wiring for LR589

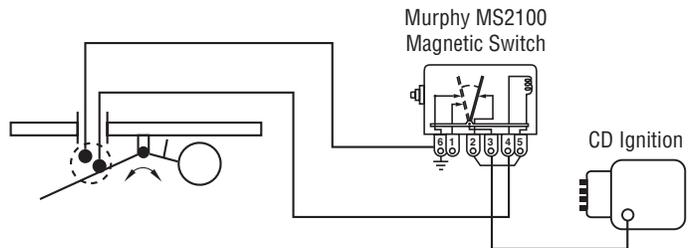

MURPHY 美国Murphy仪表经销商

北京

信德迈科技(北京)有限公司 CNMEC Technology
 地址：北京朝阳区胜古中路2号金基业大厦201室
 邮编：100029
 电话：010-8428 2935 13910962635
 传真：010-8428 8762
 主页：//www.cnmec.com
 电子邮件：sales@cnmec.biz

In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time.

Printed in U.S.A.